
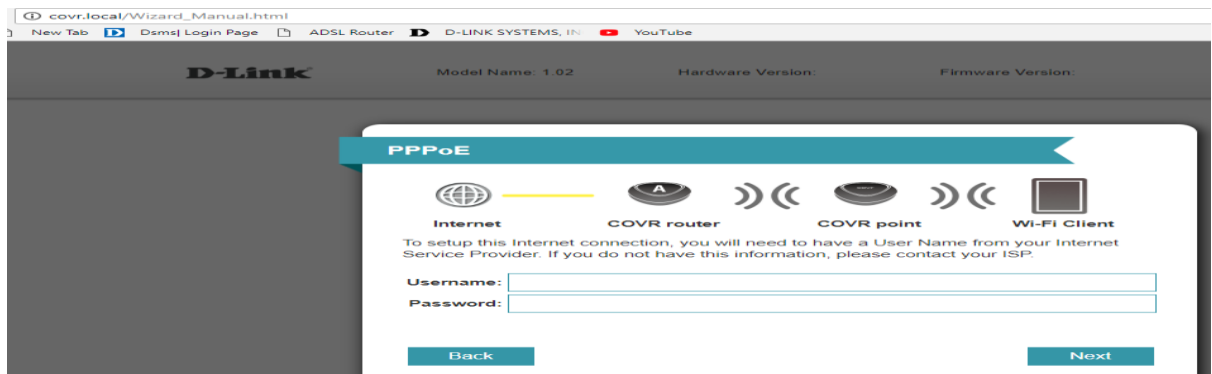



COVR C1200 CONFIGURATION GUIDE.

Point A configuration:


1. Power up device and connect port 2 to PC or Laptop with Ethernet cable and port 1 to internet cable.
2. Open browser on your laptop or PC , type [http://covr.local./](http://covr.local/) as below screen will appear and follow the instructions to complete the configuration. Click next.

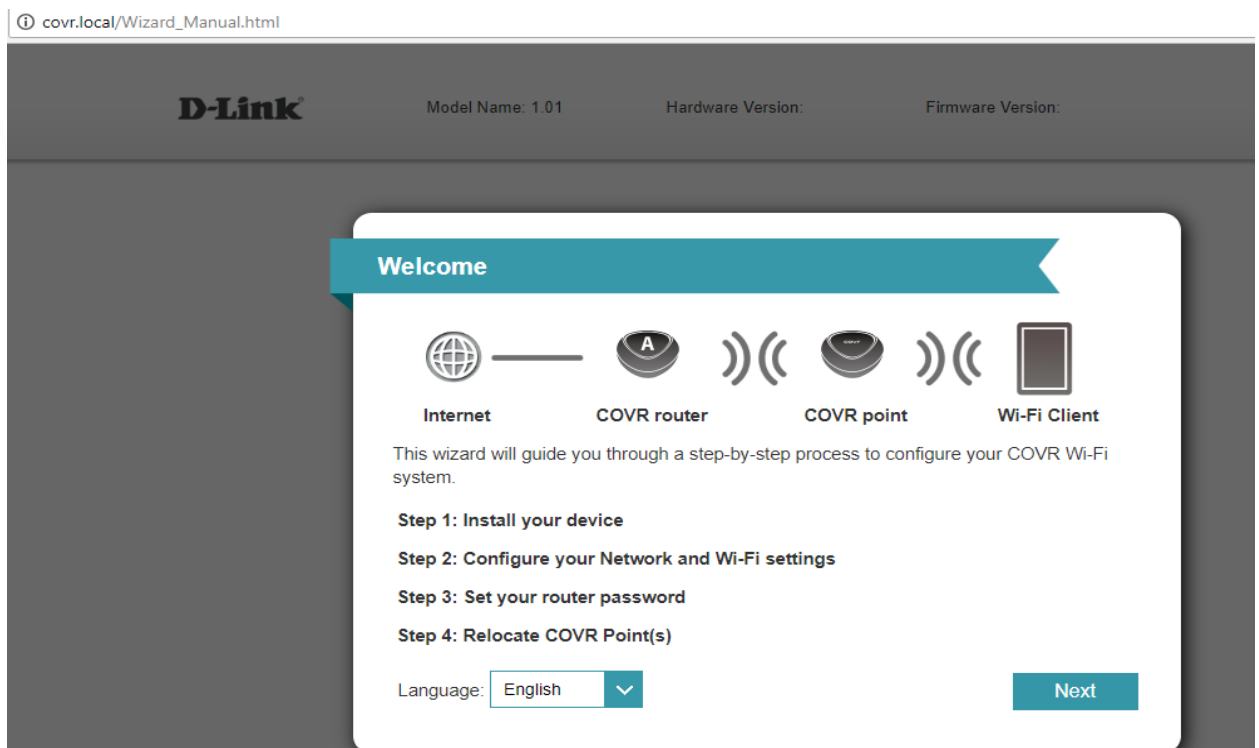


3.Type user name and password provided by your internet service provider(ISP).Then click next.

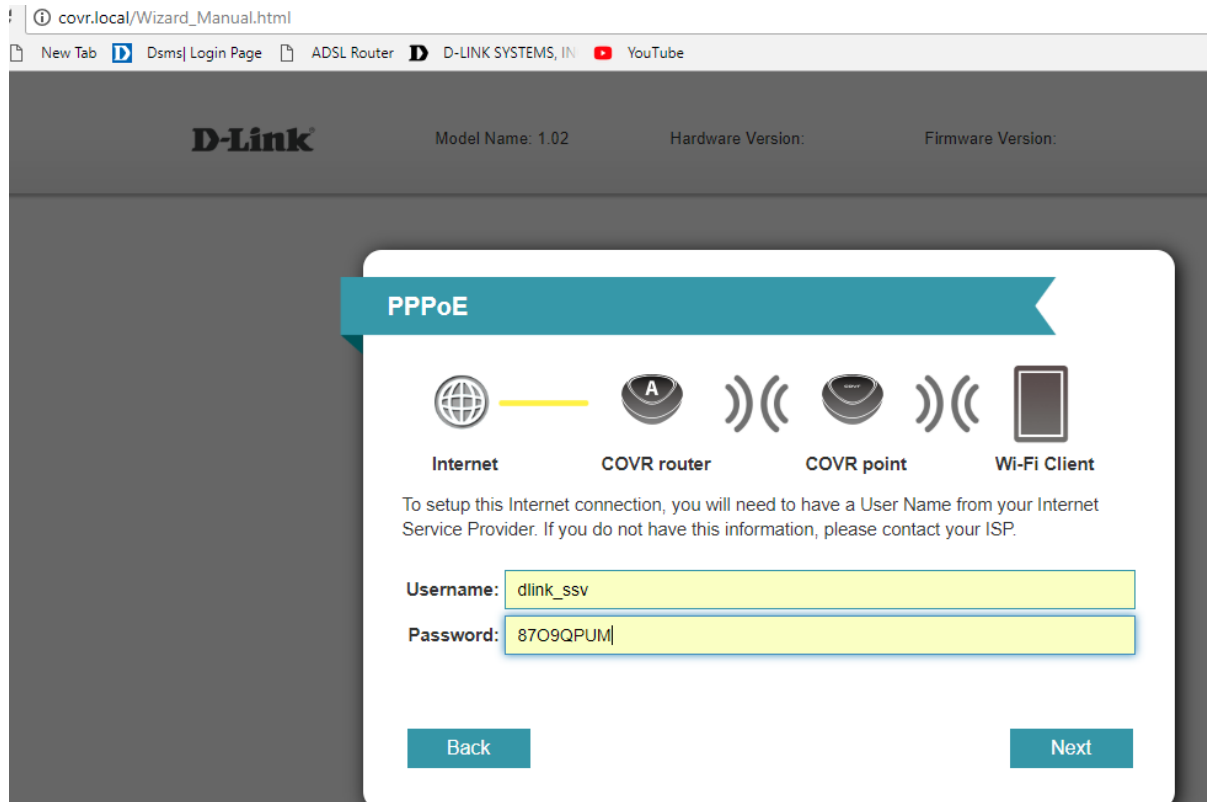


6.Set SSID(WIFI name) and Password as you wish and click next.

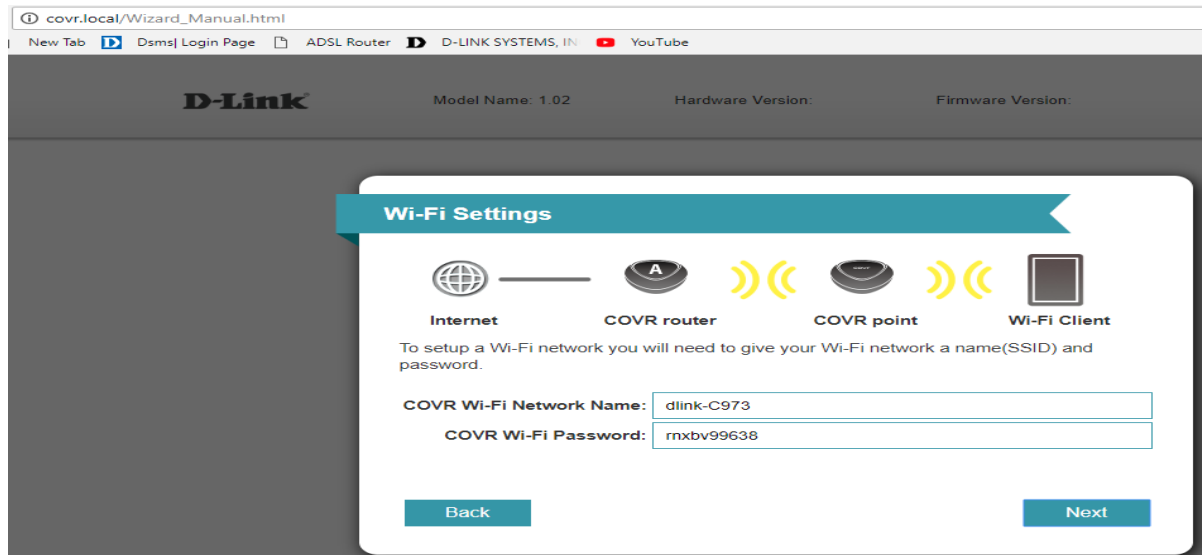


7. Set your device admin password and click next.

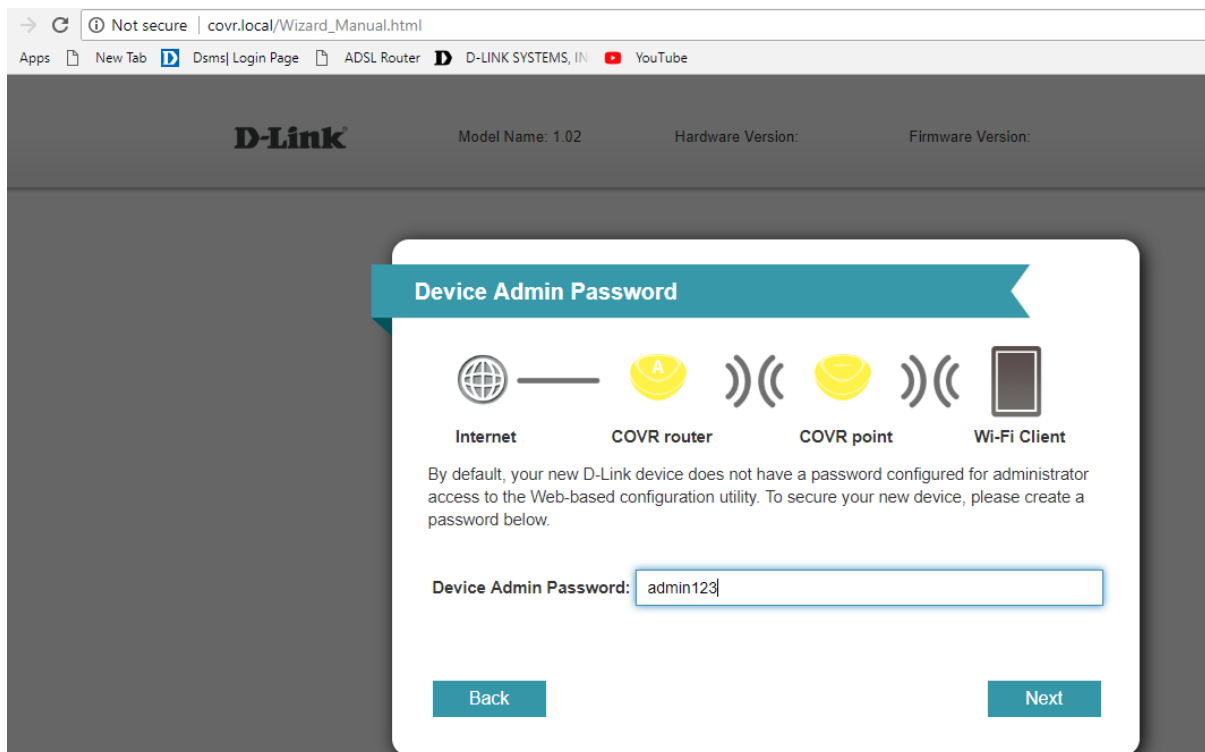

8. Now it will display summary of configuration changes done by you as like below screen, includes Internet connection type, SSID, Password and device admin password.

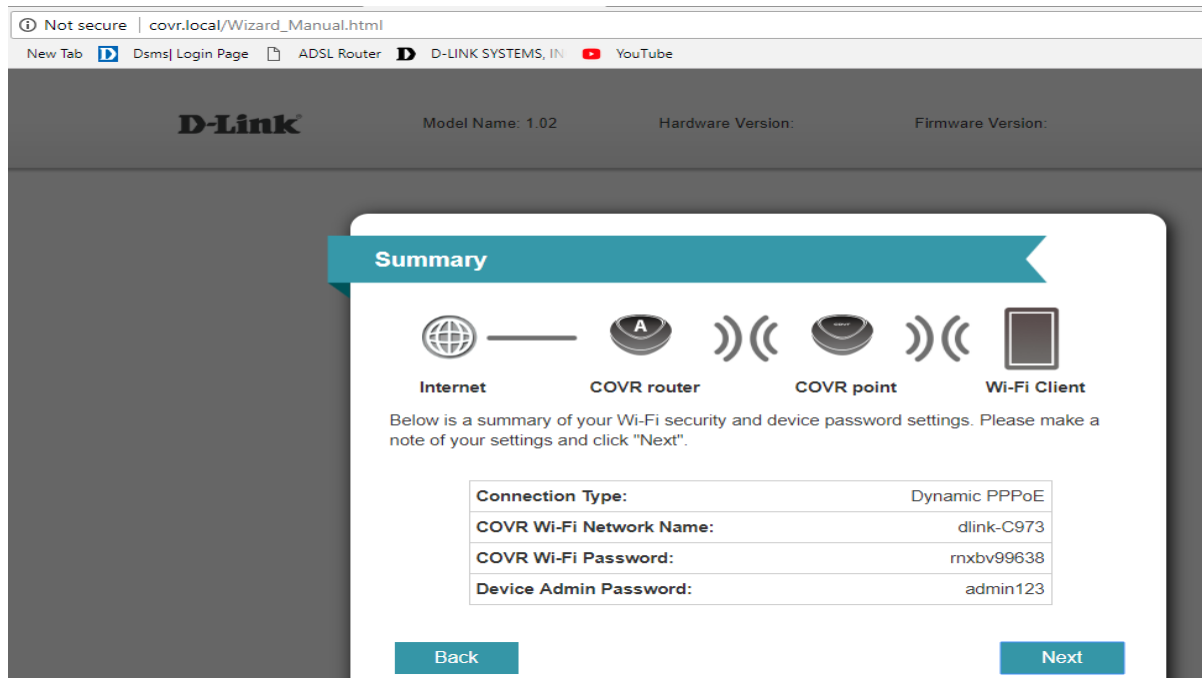

9. Click next to save the configuration.

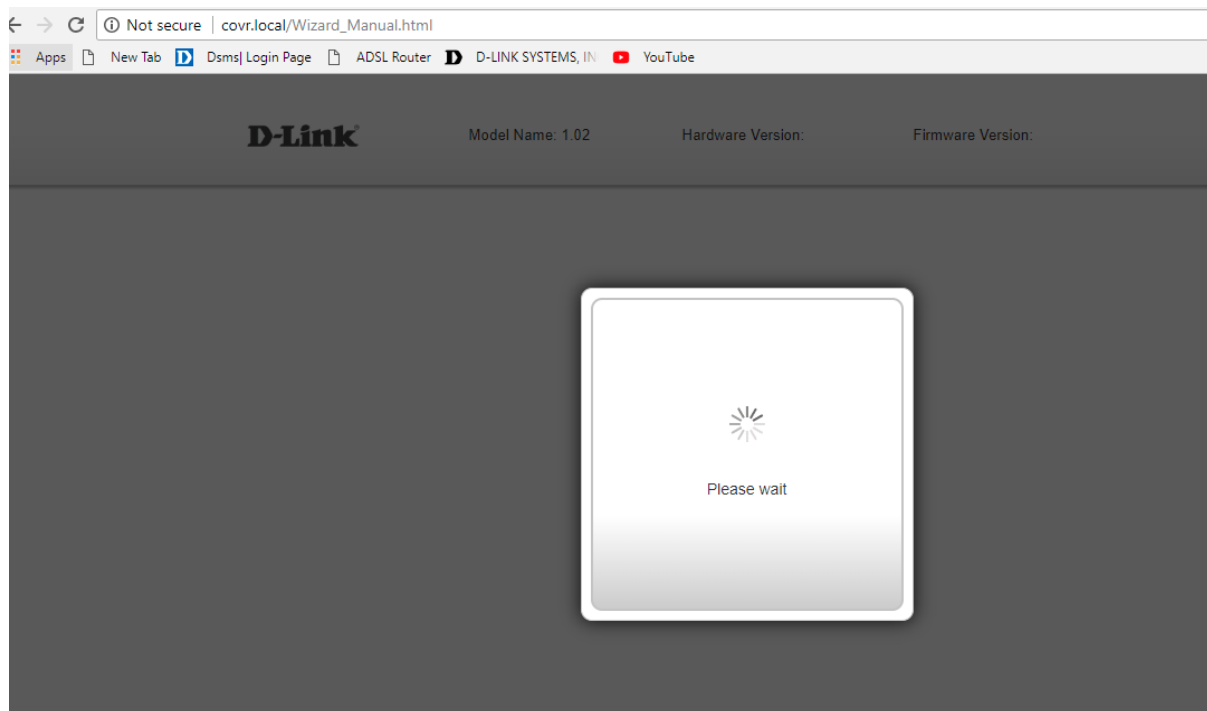

Now setup is complete check internet status on home page as below screen. After few seconds(60seconds) internet will start working ,you can check by browsing any website.

covr.local/Home.html


New Tab | Dsms| Login Page | ADSL Router | D-LINK SYSTEMS, IN | YouTube

D-Link
COVR-C1200 HW:A1 FW:1.02

Home | Settings | Features | Management

Internet Connected

Click on any item in the diagram for more information.

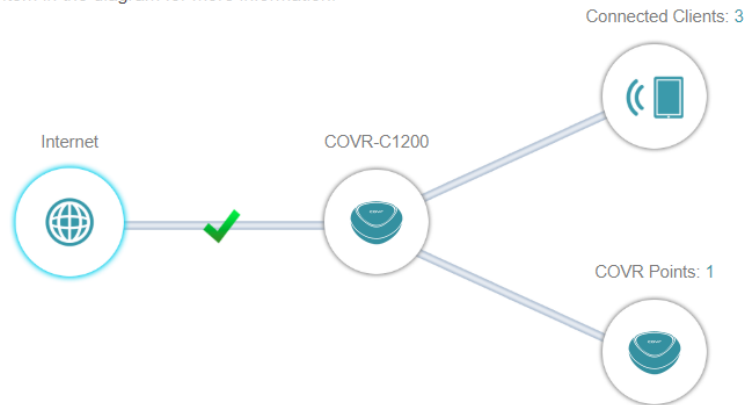

POINT B CONFIGURATION:

1. Power on point B and wait till orange light blink then press WPS button simultaneously on Point A and point B. Once Point B light turns solid white means point B connected to point A. (Please make sure Point A and Point B are in range).
2. Now same process to configure another point B.



